

QUALITY RECOVERS.



QUALITY WORKS.


LANXESS
Energizing Chemistry

Lewatit® MonoPlus TP 209 XL – a Tailor-made Resin for Recovery from Pulps (RIP Processes)

New approach

Lewatit® MonoPlus TP 209 XL is a monodisperse iminodiacetic acid (IDA) chelating resin and the latest member of the TP specialties family. Compared with other IDA resins such as Lewatit® MonoPlus TP 207 it has a bigger particle size (approx. 0.84 mm) and a higher total capacity (>2.4 eq./l). Its special macroporous styrene/DVB copolymer structure results in high mechanical stability. Thus, Lewatit® MonoPlus TP 209 XL is especially suited for the recovery of metals such as copper, cobalt, and nickel from pulps.

Lewatit® MonoPlus TP 209 XL

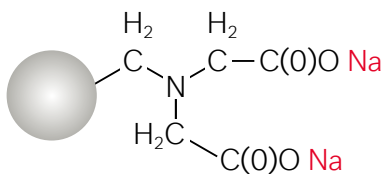

Schematic representation of the IDA functional group.

Key features

- Strong and elastic properties to endure mechanical stress in RIP operations
 - Less resin loss during operation due to breakage
 - Longer lifetime
 - Reduced top-up volumes
- Bigger bead size to ease resin separation from pulps through sieving
- Higher operating capacities for base metals
- Fast kinetics during adsorption and elution
- Good osmotic stability
- Lower pressure drop in fixed-bed operations

The improved polymer backbone, with a higher degree of cross-linkage, leads to enhanced mechanical durability towards abrasion and attrition, as these can occur while resins are pumped, sieved, or stirred with pulps during hydrometallurgical operations.

X Lewatit®

The mechanical resistance is demonstrated by three different test methods, i.e., the attrition test, roll test, and ball mill test. All three tests simulate the forces that ion exchange resins are exposed to during the RIP process. Lewatit® MonoPlus TP 209 XL shows superior mechanical stability for all test methods.

Figure 1: Attrition test showing the percentage decrease in diameter (d_{50}) upon grinding ion exchange beads with a quartz pulp.

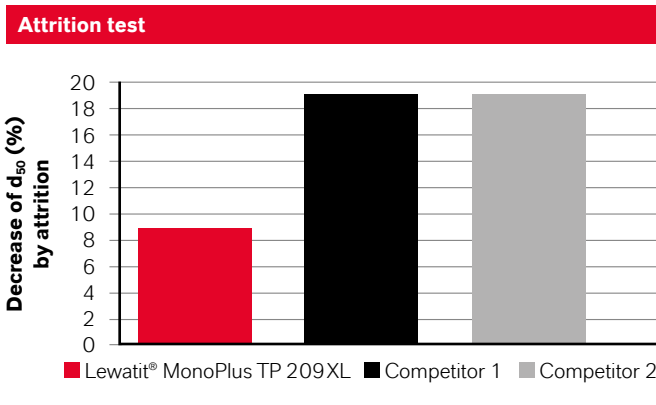


Figure 2: Roll test depicting the remaining whole perfect beads after rolling a 5 kg cylinder over a monolayer of beads 20 times.


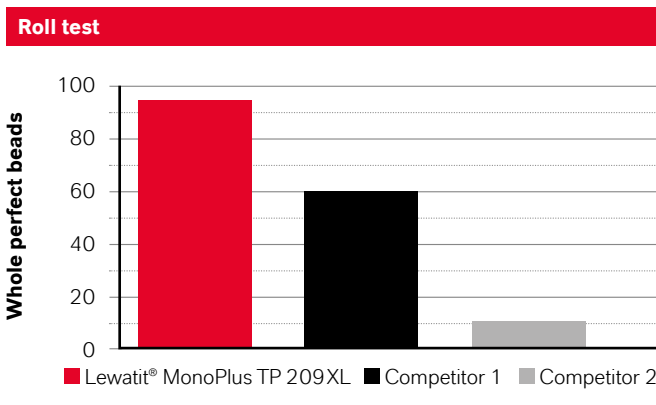



Figure 3: Ball mill test depicting the remaining whole perfect beads after milling 60 min with ceramic spheres at 600 rpm.

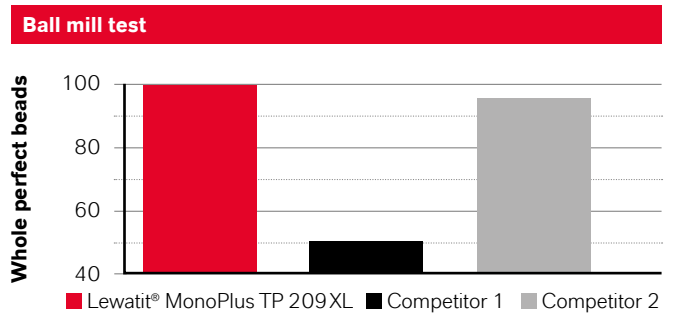

At the same time, Lewatit® MonoPlus TP 209 XL has a significantly higher capacity for heavy metals than conventional IDA resins.

Figure 4 illustrates the benchmark results for the copper adsorption in batch tests. Under the described test conditions, copper operating capacities of more than 80 g/l were found.

Figure 4: The equilibrium copper capacity in comparison
Test conditions: [Cu] = 3 g/l
Resin: solution ratio = 1:50, pH = 3, contact time = 24 h

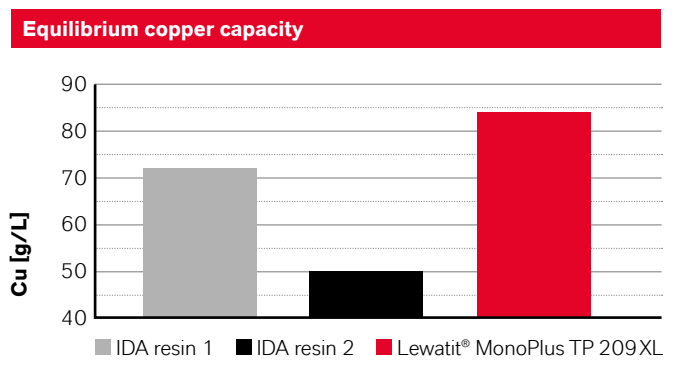

We will be happy to support your business. Please contact us for additional information: visit www.lpt.lanxess.com

LANXESS
Energizing Chemistry

LANXESS Deutschland GmbH
Liquid Purification Technologies
Kennedyplatz 1, 50569 Cologne, Germany
Phone: +49 221 8885-0
E-mail: lewatit@lanxess.com

Health and Safety Information: Appropriate literature has been assembled which provides information concerning the health and safety precautions that must be observed when handling the LANXESS products mentioned in this publication. For materials mentioned which are not LANXESS products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be followed. Before working with any of these products, you must read and become familiar with the available information on their hazards, proper use and handling. This cannot be overemphasized. Information is available in several forms, e.g., material safety data sheets, product information and product labels. Consult your LANXESS representative in Germany or contact the Health, Safety, Environment and Quality Department (HSEQ) of LANXESS Germany or - for business in the USA - the LANXESS Product Safety and Regulatory Affairs Department in Pittsburgh, PA.

Regulatory Compliance Information: Some of the end uses of the products described in this publication must comply with applicable regulations, such as the FDA, BIF, NSF, USDA, and CPSC. If you have any questions on the regulatory status of these products, contact your LANXESS Corporation representative, the LANXESS Regulatory Affairs Manager in Pittsburgh, PA or the Health, Safety, Environment and Quality Department (HSEQ) of LANXESS Deutschland GmbH in Germany. The manner in which you use and the purpose to which you put and utilize our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations are beyond our control. Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis must at least include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by us. Unless we otherwise agree in writing, all products are sold strictly pursuant to the terms of our standard conditions of sale. All information and technical assistance is given without warranty or guarantee and is subject to change without notice. It is expressly understood and agreed that you assume and hereby expressly release us from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance, and information. Any statement or recommendation not contained herein is unauthorized and shall not bind us. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent.

All trademarks are trademarks of the LANXESS Group, unless otherwise specified. Status 05/2019.